

# **HS-429 Vibration Trip Manual**



# **CONTENTS**

1. SAFETY INSTRUCTIONS	2
2. FUNCTIONS AND FEATURES	2
3. INSTALLATION	2
4. ELECTRICAL CONNECTION	3
5. SETTINGS	3
6. MEASUREMENT RANGE	3
7. SWITCHING AND BEHAVIOUR	4
8. OPERATING AND DISPLAY ELEMENTS	5
9. MAINTENANCE, REPAIR AND DISPOSAL	6
10. TECHNICAL PERFORMANCE	6
11. ELECTRICAL	6
12. MECHANICAL	6
13. ENVIRONMENTAL	6
14 CADI E ACCEMDI V DETAII C	7

An instruction is indicated by "▶":

Example: ► Check whether the unit operates correctly.

!

Important note

Non-compliance can result in malfunctions or interference

í

Information

Supplementary note

# 1. SAFEY INSTRUCTIONS

- Please read the product description prior to set-up of the unit, ensure that the product is suitable for your application without any restrictions.
- The unit conforms to the relevant regulations and EC directives.
- Improper or non-intended use may lead to malfunctions of the unit or to unwanted effects in your application.
- That is why installation, electrical connection, set-up, operation and maintenance of the unit must only be carried out by qualified personnel authorised by the machine operator.

# 2. FUNCTIONS AND FEATURES

The vibration sensor detects the vibration in the system (measured / evaluated physical unit = vibration velocity). This is converted into an analogue signal at the current output. The switching output behaviour is determined using the two setting rings.


# 3. INSTALLATION

- ► Mount only in a thick housing wall (e.g. transport thread).
- ► Ensure that the signal direction is correct.
- ► Ensure a safe vibration transmission and allow no elastic intermediate layers.
- ► Tighten the sensor with a tightening torque of 15 Nm.

# 4. ELECTRICAL CONNECTION



The unit must be connected by a qualified electrician. The national and international regulations for the installation of electrical equipment must be adhered to.

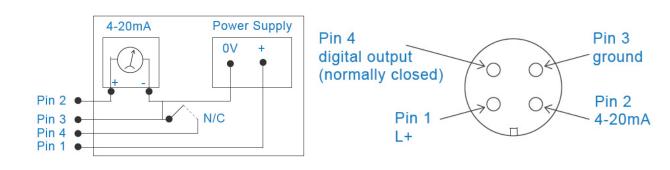

# 5. SETTINGS

**RMS Set** 


Effective value of the switching threshold, defining the limit value of the vibration velocity. Delay Set

Time in seconds during which the limit value must be effectively above the switching threshold (RMS Set) to activate the switching output (normally closed pin 4).

# 6. MEASUREMENT RANGE

Velocity range	0-25 mm/sec or 0-50mm/sec 0-1 IPS or 0-2 IPS
Input	4-20mA
Response delay	1-60 sec

# 7. SWITCHING OUTPUT BEHAVIOUR

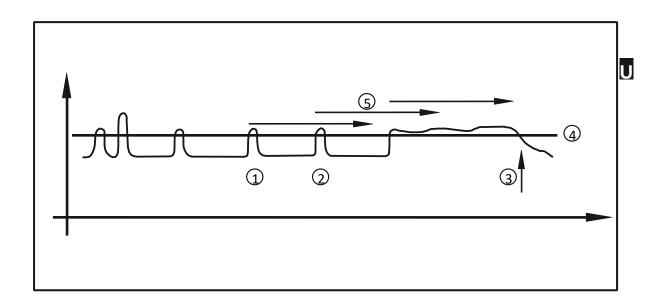

- 1: Time delay after the switching threshold has been exceeded.
- 2: Time delay after the switching threshold has been exceeded.
- 3: Switch-off.
- 4: Switching threshold.
- 5: Delay.

 $V_{ss}$  = vibration.


velocity t = time.

Implementation of the time delays.


The time delay starts when the defined switching threshold is exceeded (1) / (2).

The time delay is cancelled when the value falls below the switching threshold (without switch-off). The switch-off is triggered when the switching threshold is exceeded during a full-time delay (3).

# 8. OPERATING AND DISPLAY ELEMENTS

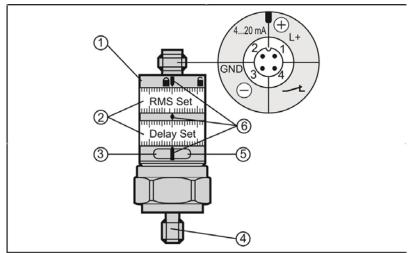

- 1) Locking ring.
- 2) Setting rings (manually adjustable after unlocking).
- 3) LED green: voltage supply.
- 4) M8 process connection.
- 5) LED yellow: lights when switching threshold and time delay are exceeded.
- 6) Setting marks.
  - To achieve the setting accuracy: first position the rings to the lower end stop value, then set the requested value

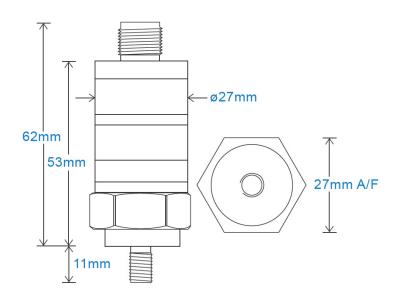

# 9. MAINTENANCE, REPAIR AND DISPOSAL

The operation of the unit is maintenance-free. It is not possible to repair the unit. After use dispose of the unit in an environmentally friendly way in accordance with the applicable national regulations.

# 10. TECHNICAL PERFORMANCE

Velocity ranges: To be specified with order,  $\pm 10\%$  Nominal 80Hz at 22°C Frequency response: 10Hz (600cpm) to 1kHz (60kcpm)  $\pm 5\%$  - ISO10816

False trigger delay: Adjustable up to 60 seconds

Trip setting: Fully adjustable

# 11. ELECTRICAL

Current output: 4-20mA DC proportional to Velocity Range

Supply voltage: 18-32 Volts DC

Switching output: NC, PNP up to 500mA

Display OK LED: Green Trip LED: Yellow

Current consumption: 18-30volts DC at 50mA

# 12. MECHANICAL

Case material: Stainless Steel 316L/plastic

Mounting torque: 15Nm

Weight: 116gms (nominal)

Screened cable assembly: HS-AC010 (straight), HS-AC011 (right angle)

Mounting threads: M8 x 1.25mm male


#### 13. ENVIRONMENTAL

Operating temperature range: -25 to 80°C Sealing: IP67
Maximum shock: 100g

EMC: EN61326-1:2013

Reverse polarity: Protected MTBF: 510 years

# **Connection Details of Cable Assembly**

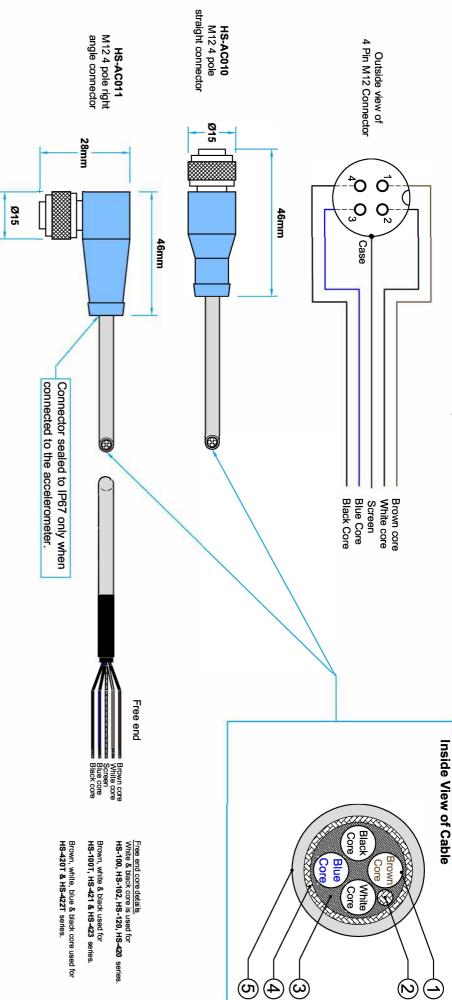

	4.	ω	2		wire	Cable	Pos	
Outer sheath, Polyether-Polyurethane PUR11Y Flame retardant acc. to VDE 0472, Part 804/B Oil resistant acc. to VDE 0472, Part 803 Halogen free, free of	Screen, tinned copper	Stranding, 4 cores surrounding a woollen inner core	Screen wire, tinned copper	Conductor, bare soft copper wire	wire qualified for drag chains acc. to UL/CSA 20233	Cable description: LiF9YHC11YH 4 x 0.34mm2 with drain	Description	Materia
					Deliging lagids	Bending radius	Dimension	Materials of Cable
5.9 ±0,2mm			0.20mm	0.10mm	min. 5 x outer-Ø	min.10 x outer-Ø	Overall Diameter	
Grey similiar to RAL7040	Coverage: 84% min	Lengh of lay approx 43mm drain wire		acc. to VDE 0295, cl 6	Fixed installation	Moving	Remarks	NG.

-		]		×		6		L		
	4									
i dilibaratura ranga	Temperature range		Capacitance		Inductance	Normal voltage	Test voltage	Resistance	Technical Data	Techr
-50°C bis + 80°C	-40°C bis + 80°C	Wire/screen: 120.0	Nonparallel wires: 63.1	Parallel wires: 66.7	0.7	300	2	≤57	Values at 20°C	Technical Data of Cable
Fixed installation	Moving	pF/m			μH/m	<	₹	Ω/km	Unit	



Tel: +44(0) 845 680 1957
Fax: +44(0) 845 680 1958
Email: sales@hansfordsensors.com
Web: www.hansfordsensors.com